

Ultrasound Ultraprobe 10,000 Instructions

Inserting and Removing Modules

Rev. 1.0

3/2012 SAFETY: Wrist Strap to be worn at ALL TIMES


△ TQC □ Work ○ Verify

5 min

UE Systems Training

1

The front of each Ultraprobe has FOUR Gold Receptacles.

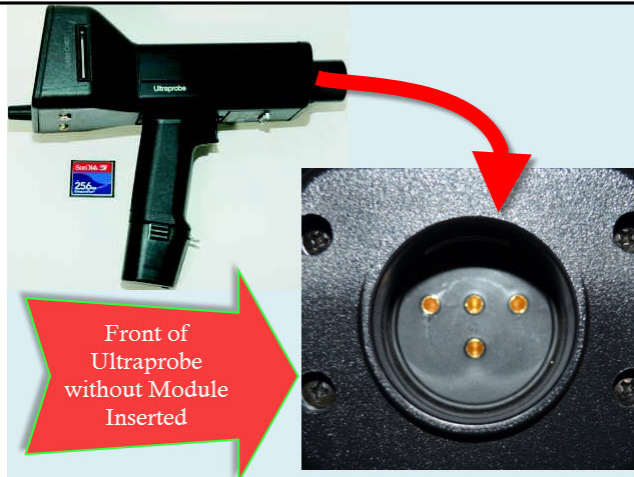


2

Each Module has FOUR Gold Pins.



3

Insert by Pushing the Module Straight IN. DO NOT TWIST!

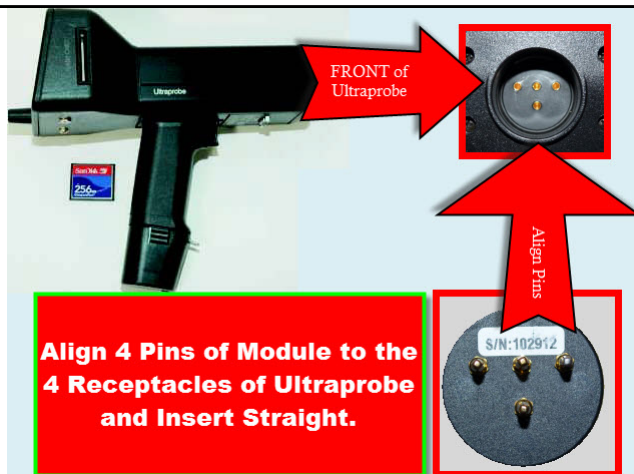

4

The Modules do NOT "Lock IN" as they are a press fit for Quick Release for Safety. Take care NOT to Damage the Gold Pins of the Modules.

