

VISUAL INSTRUCTION
ULTRAPROBE 10,000SD
Recording Sound WAV Files




10,000SD Recording WAV Files



Ultraprobe 10,000SD - Recording WAV File: How To Guide

NOTE: UE DMS Software and Spectralyzer Software available for download at www.UESystems.com

1. Selecting Record WAV
2. Proper Recording Parameters
3. Recording WAV Files
4. Saving WAV Files
5. Reviewing WAV Files

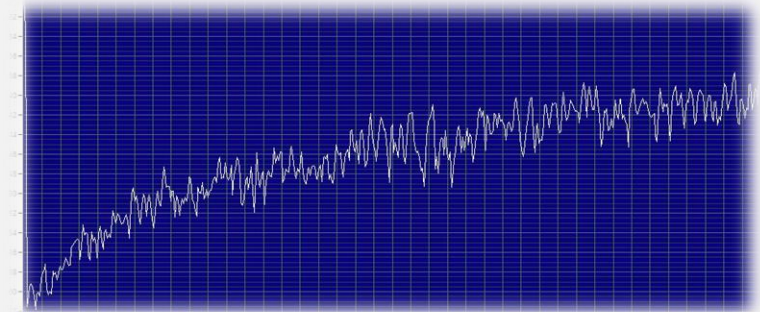


SAFETY: THE WRIST STRAP SHOULD BE WORN AT ALL TIMES

10,000SD Recording WAV Files



The Ultraprobe 10,000SD Comes Standard with Recording Capabilities. To **Record Sound WAV Files**, First Select **Record WAV** from the Function Bar, Located at the Bottom of the **Main Display**. Clicking the **Sensitivity Dial** Until the Function Bar is Flashing, Then Spin Dial Until **Record WAV** is Shown, Then Press **ENTER**.

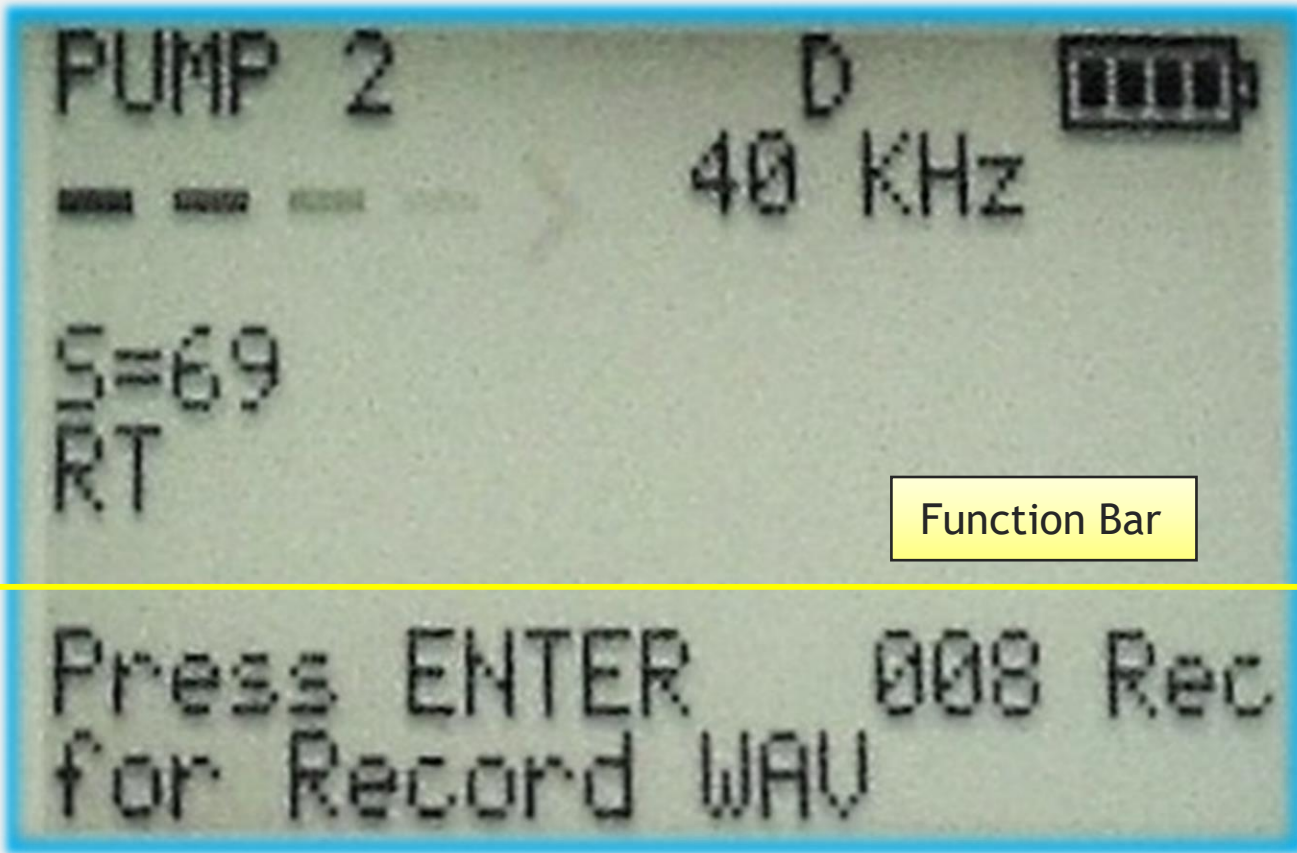

SAFETY: THE WRIST STRAP SHOULD BE WORN AT ALL TIMES

10,000SD Recording WAV Files



To Ensure Proper Recording Parameters, The Intensity Meter Must Be Between Two (2) to Four (4) Bars. This Will Avoid Distortion of the Recording and “Clipping” of the Data Within the Software.




SAFETY: THE WRIST STRAP SHOULD BE WORN AT ALL TIMES

10,000SD Recording WAV Files



When Inspectors are Ready to Record, Enter into the Recording WAV Menu. **PRESS** and **HOLD** the **Sensitivity Dial** to Begin Recording. The Ultraprobe 10,000SD Has a **Maximum Recording Time of Two (2) Minutes**. When Finished Recording, Simply **Release** the Sensitivity Dial. If Record WAV is Selected by Mistake, Press **ENTER** to Exit.

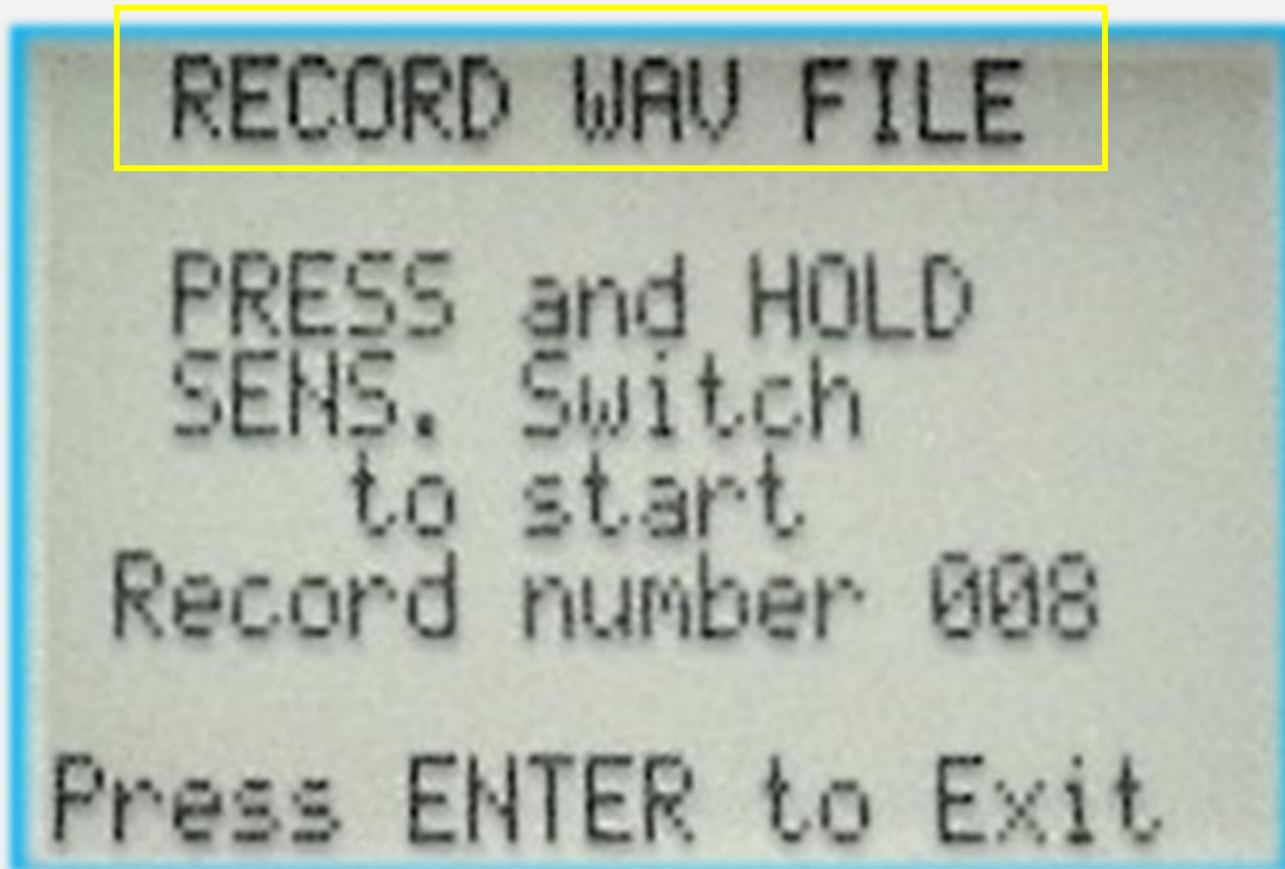


SAFETY: THE WRIST STRAP SHOULD BE WORN AT ALL TIMES

10,000SD Recording WAV Files



When Active, the Ultraprobe 10,000SD Indicates a **Recording is in Progress**. This will Remain Within the Display While the Sensitivity Dial is **Pressed**. Once the Dial Is **Released**, Permanent **Saving** Options are Available. A Timed Option is Also Available from Five (5) to Thirty (30) Seconds Via **Setup Menu #7 - Set Record Time**.

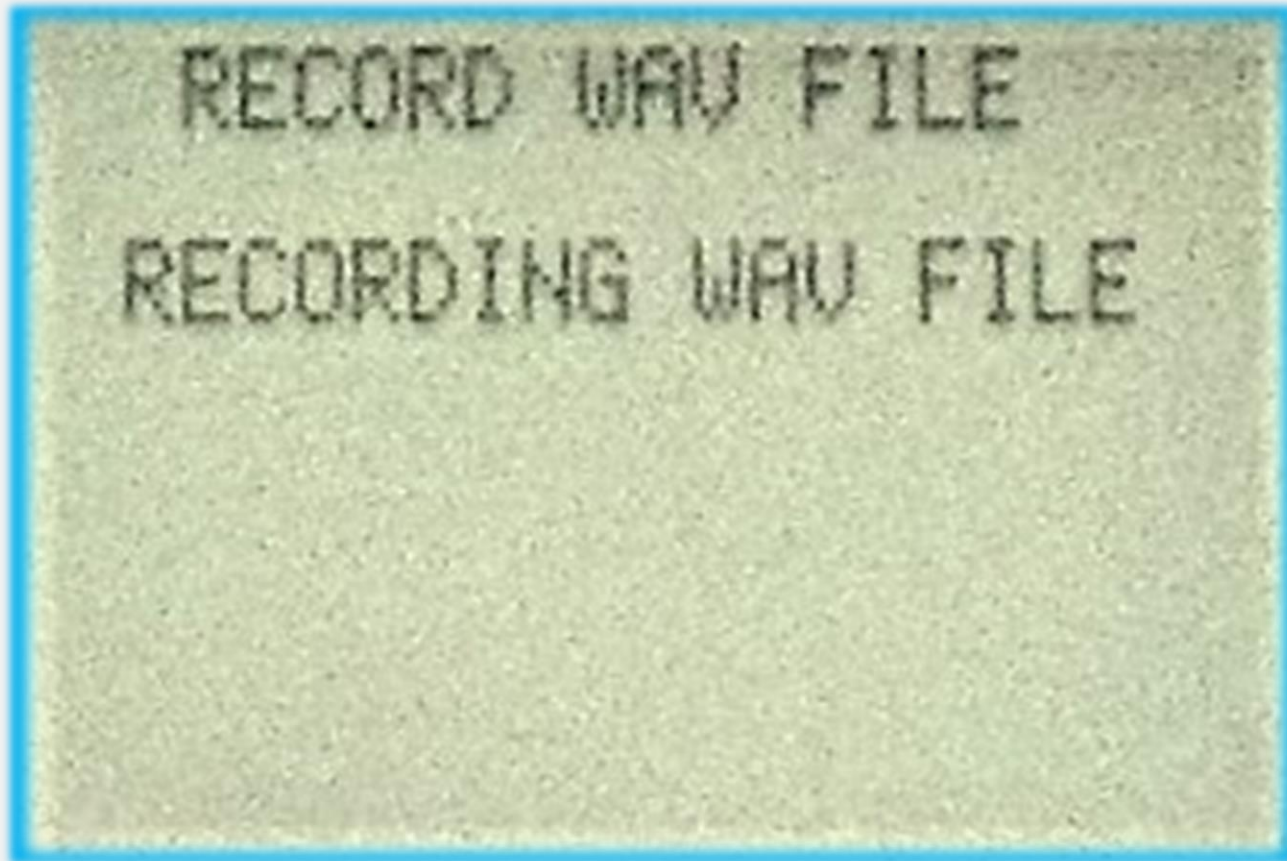

SAFETY: THE WRIST STRAP SHOULD BE WORN AT ALL TIMES

10,000SD Recording WAV Files



Once Recording is Completed, **Release the Sensitivity Dial**. The Ultraprobe 10,000SD Offers a **Playback** Option. By Pressing the **ENTER** Button, Inspectors Can Immediately Listen to the Recording to Ensure Quality. Once Played Back, or if No Playback is Necessary, Simply Press the **Sensitivity Dial** to Continue.




SAFETY: THE WRIST STRAP SHOULD BE WORN AT ALL TIMES

10,000SD Recording WAV Files



Once Recording is Completed, Saving WAV Files is Simplified with Two (2) Options. Pressing the ENTER Button to Permanently Save the File Or Press the Sensitivity Dial to Exit the Record WAV Menu Without Saving the File.

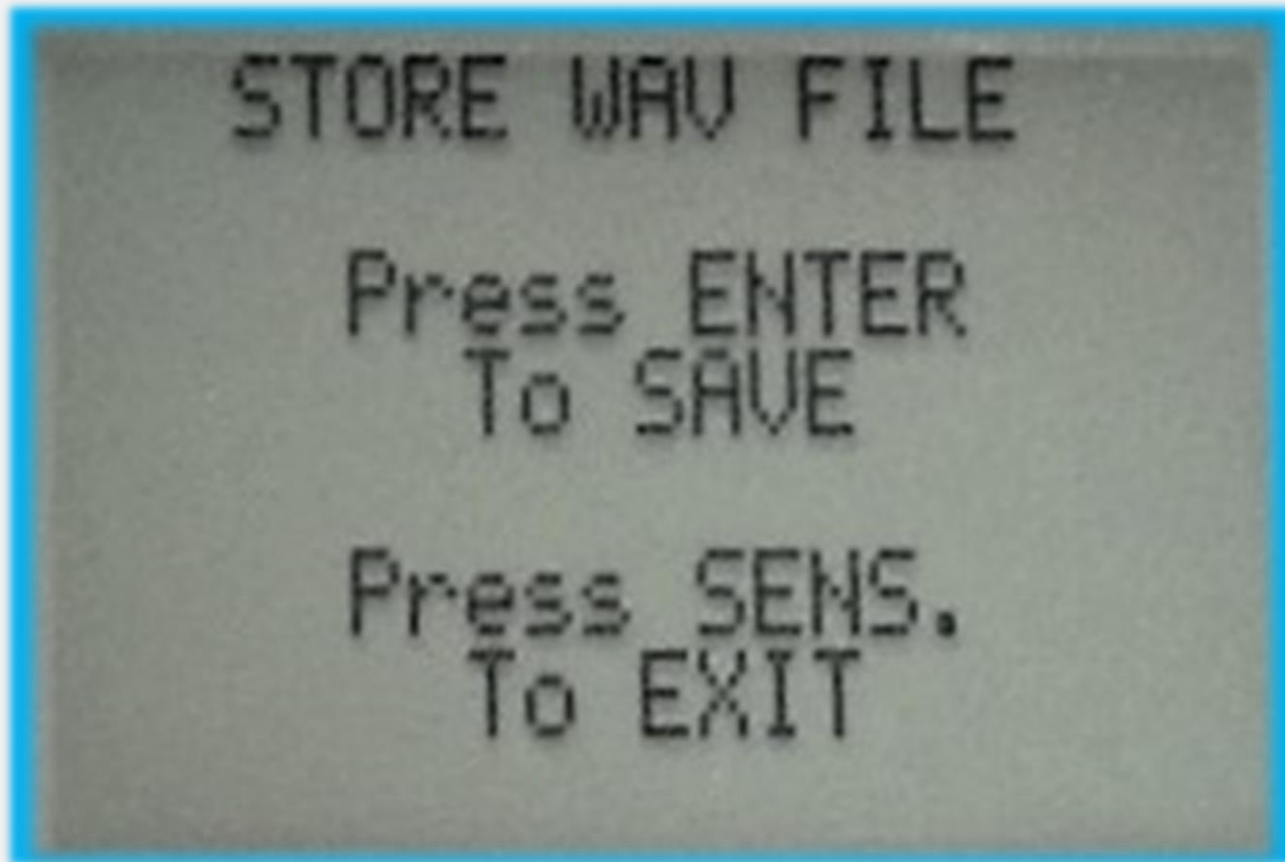

SAFETY: THE WRIST STRAP SHOULD BE WORN AT ALL TIMES

10,000SD Recording WAV Files



Once the **ENTER** Button is Pressed, Two (2) **Confirmation Displays** Will Populate. The First Will Be the **Store Record Confirmed**, Signifying That **All Text Data Has Been Stored** to the Preselected Record.



SAFETY: THE WRIST STRAP SHOULD BE WORN AT ALL TIMES

10,000SD Recording WAV Files



Once **Permanently Saved**, the Ultraprobe 10,000SD Prompts a **Confirmation Screen** to Alert Inspectors the WAV File has Been Saved and Stored to That Specific Record Number. Once the WAV File has Been Saved Properly, The Unit Will **Automatically** Return to the Main Display and Advance to the Next **Test Point**.



WAVE
STORE
CONFIRMED

SAFETY: THE WRIST STRAP SHOULD BE WORN AT ALL TIMES